


Removing and Replacing Brake Springs

Removing and installing drum brake springs can be made much easier with these two tools. The one with the red handle is the hold-down spring tool and the other one is the retraction spring tool.

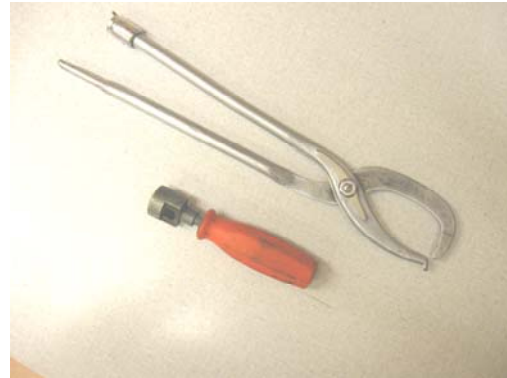

- *Place one finger on the back side of the hold down pin*
- *The other hand is on the hold down spring tool, push the tool down and turn 90 degrees, let the tool up and the spring should be free.*

To remove the retraction springs, place the proper end of the tool over the anchor pin and turn, the spring should follow the tool off the anchor pin.



To reinstall the retraction spring use the opposite end of the tool like a pry bar. Hook it through the spring and over the anchor pin, pull up on the tool letting the spring slide up the bar onto the anchor pin.