


Tire Changing Machine

(All Wheel Weights Contain Lead, wear protective gloves when in direct contact with them)

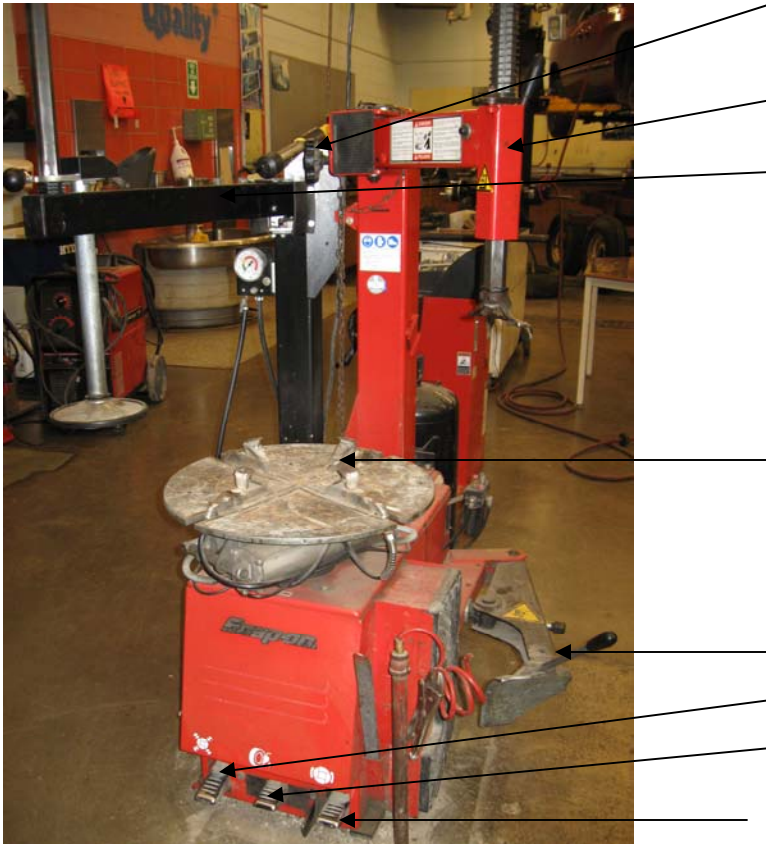

Check List before you start:

- *Check to make sure the new tire matches the tire currently on the rim.*
- *Have all the wheel weights been removed from the wheel.*
- *Has all the mud and gravel been removed from the wheel.*
- *What is the manufactures recommended air pressure to use when reinflating the tire.*
- *Has the tool bar been properly adjusted.*
- *Is the working environment safe for the operator and the machine.*
- *What is the condition of the rim (wheel)*

Safety Rules:

- *Always make sure that the tire and rim are the same diameter.*
- *Use approved tire bead lubricant.*
- *Keep hands and entire body back from inflating tire.*
- *Inflate tires with short bursts of air, checking the tires air pressure frequently.*
- *Do not exceed 35 psi while seating the tires beads.*
- *Never exceed the tires manufactures recommended air pressure.*
- *Always use the safety restraint arm to hold wheel down during inflation process.*
- *Never mount split rims on this machine, or shop.*
- *Only one person on the machine at one time.*
- *Always wear safety glasses.*